

Specification and Machanical Dimension

Model	Volts/Amps	Battery	Dimension L*W*H (mm)
QQE480-4CH51	48V/10A	48V/50-100Ah	(Aluminum Case) 160*100*50
QQE960-4CH35	48V/20A	48V/75-200Ah	(Aluminum Case) 160*100*50
QQE1200-5CH07	48V/25A	48V/100-200Ah	(Aluminum Case) 160*100*50

Feature & Operation

<1>.Input Fuse: 48V/10A, 48V/20A, 48V/25A

<2>.Input : Inlet as Standard IEC 320

<3>.Input Voltage Selection : Set proper voltage

 
before operation.

<4>.power On/Off: press I, power on.

press O, power off. .

<5>.Heat Spread Hole: Make sure no stuff & in good air condition.





<7>.Charger & Battery status Indicator:

1. Power on, Dead Battery or Battery Disconnected: LED continuous Light.

2.Deep charge Mode: LED Flashing two times, Stop at 2s.

3.Fast charge Mode: LED Blinking Fast at 0.5(s).

4. Trickle charge Mode: LED Flashing at 2(s).

5. Stortage Charge Mode: LED Blinking slowing at 5(s).

<8>.Output Fuse : Prevent DC Output Plug Reversal. 250V/6.3A

•<9>.Output cord : (23 1









<10>.Battery Capacity Level Indicator :

With AC, display the battery's Capacity of Charging. Without AC, Indicated Battery Capacity.



Edac Power America, Inc.

20535 Paseo Del Prado Walnut, CA 91789, USA

Tel: +1- 909- 594- 1828 Fax: +1- 909- 594- 1978

Email: Sales@edacpower.com

http://www.edacpower.com